

MONITOR FEATURES

	FIELD COMMANDER BASIC	FIELD COMMANDER ENHANCED	FIELD COMMANDER PRO	FIELD COMMANDER LITE	COMMANDER-VP	ICON LINK	PRECISION LINK	FIELD COMMANDER 24V STOP	FIELD COMMANDER 24V START	FIELD COMMANDER SOLAR
POWER ON/OFF			•	•	•	•	•	•		
ACRE INCHES APPLIED	•	•	•	•	•	•	•	•	•	•
AUXILIARY RELAY STATUS			•	•	•	•	•	•		
BATTERY STRENGTH	•	•	•	•	•	•	•	•	•	•
CELL SIGNAL	•	•	•	•	•	•	•	•	•	•
COMPLETE REVOLUTION TIME	•	•	•	•	•	•	•	•	•	•
CRASH (OVERLAP) ZONE	•	•	•	•	•	•	•	•	•	
CURRENT CYCLE TIME	•	•	•	•	•	•	•	•	•	•
DIRECTION	•	•	•	•	•	•	•	•	•	•
DIRECTION TABLE			•	•	•					
DUAL STOP @ ANGLE	•	•	•	•	•	•		•	•	
END GUN		•	•		•	•	•	•		
END GUN 2			•		•		•			
ESTIMATED RATE	•	•	•	•	•	•	•	•	•	•
FLOW					•	•	•			
GPS LOCATION	•	•	•	•	• ¹	• ¹	•	•	•	•
HISTORICAL REPORTS	•	•	•	•	•	•	•	•	•	•
LAST READING	•	•	•	•	•	•	•	•	•	•
PENDING TIMED COMMANDS	•	•	•	•	•	•	•	•	•	
PIVOT ON/OFF	•	•	•	•	•	•	•	•	•	•
PUMP ON/OFF	•	•	•	•	•	•	•	•	•	•
RAINFALL	•	•	•	•	•	•	•	•	•	•
REMAINING REVOLUTION	•	•	•	•	•	•	•	•	•	•
REMOTE SPEED OVERRIDE		•	•							
RUN TIME	•	•	•	•	•	•	•	•	•	•
SPEED	•	•	•	•	•	•	•	•	•	•
STATUS ALERT	•	•	•	•	•	•	•	•	•	•
STUCK ALERT	•	•	•	•	•	•	•	•	•	•
SYSTEM FAULTS					•	•	•			
TEMPERATURE					•	•	•			
THEFT MONITORING	•	•	•	•	• ²	•				
WATER PRESSURE	•	•	•	•	•	•	•	•	•	•

1. Pivot Dependent 2. Optional

* Not all features are compatible with all machine configurations.