


Carsonite[®] 360° Visibility Enhancer[®] (CVE) Installation

CAUTION: Always wear proper safety equipment. Read instructions completely before installation.

Tools required:


- Carsonite Post Driver PDR1
- Carsonite Pilot Hole Driver DP100 (optional), for hard pan or rocky soil
- Rivet Gun RUTLSRIVT

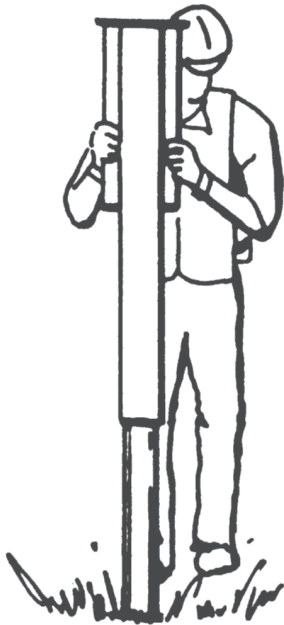

Drive the Carsonite marker into the soil using the PDR1 Driver. See post installation instructions.



Slide the CVE-3960 onto the Carsonite marker. Be sure the CVE-360 slides securely into the top recesses.

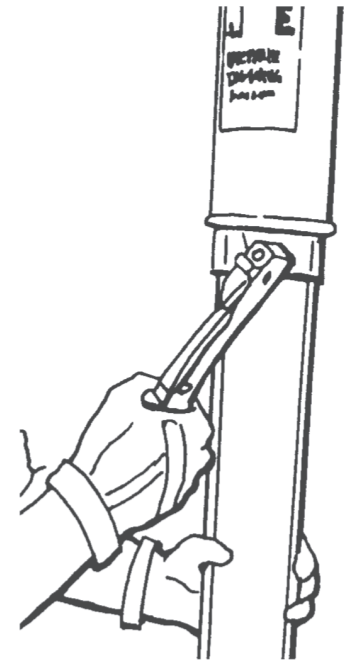

Align the pre-drilled holes on the tube with the holes on the post. Bolt or pop-rivet the CVE-360 to the Carsonite marker using the included hardware.

